

# #15010 Shaker Kitchen – Upper Corner Cabinet Kit

Step-by-step assembly instructions

Copyright miniatures.com 2024




## SUPPLIES NEEDED:

Masking tape  
White glue (such as #1249 Weldbond)  
Damp clean cloth  
Finishes



## Assembly Instructions

- Place both **Backs** on the work surface side by side with their beveled edges facing down and touching. Add tape across where the two pieces join.
- Turn the assembly over and add glue to the beveled edges. Close the pieces together and stand them up like a book. Support the joint by adding tape across the corners. Clean away excess glue inside the joint.
- Orient the assembly with the smallest shelf space towards the top.
- Glue the **Large Shelf** on the right side and into the center groove.
- Glue the **L-Shelves** into the top and bottom rabbets. Set aside.
- Glue the **Smaller Shelf** to the groove on the **Dividing Wall**.
- Glue this assembly to the left side of the cabinet assembly between the **L-Shelves**. The **Dividing Wall** touches the **Large Shelf**. All joints are flush.
- Glue the **Sides** to the outside edges of the **Shelves** and **Backs**. Orient their rabbets towards the back. All joints are flush.
- Glue the **Long Trim** to the front edges of the **Sides**. They go flush at the top edges.
- Glue on the **Shorter Trim**. They go on the front edges of the top and bottom **Shelves** and are flush against the **Long Trim**. Assure that the hinge holes are oriented towards the outer edges.
- Assemble and install the doors.
- Glue the **Corner Trim** to the inner corner. It is flush with the top and bottom **L-Shelves**.
- Finish as desired.

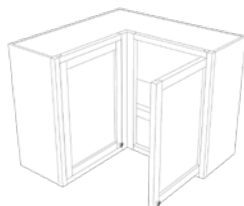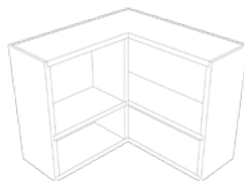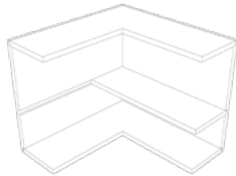

## GENERAL INSTRUCTIONS

- Identify and inspect all parts using the Parts Diagram.
- Read the directions completely before beginning the project.
- If possible, have a dedicated work area so that you are not unpacking, repacking, and moving the project from place to place.
- Choose a work surface that is level, clean, dry, and protected from glue spills.
- Do a dry fit, using masking tape to hold parts in place, to make sure everything fits together correctly before assembling permanently.

### Tips:

- The kit is precisely cut to fit together with minimal sanding, if any. Where needed, use a fine grit paper on a sanding block.
- A fine-tipped glue applicator (such as the Pinpoint Glue Syringe Kit #10244) can be helpful.
- Stain the cabinets before assembly or paint after assembly.
- All drawers in the collection fit together the same way. The sides attach around the base. All outside edges are flush. Fronts have two predrilled holes for hardware; they are flush at the bottom edge and rises above the drawer.
- All doors in the collection fit together the same way. The door framing fits around the door panel and the back is flat. The frame piece that is contoured and has a hole at either end goes on the hinge side. The hole on the surface of a frame piece is for the pull. Pulls are at the top for lower cabinets and the bottom for upper cabinets.
- To install door hinges, insert one pin in the hole at the top or side of the frame. Push the pin through and into the corresponding hole in the door. Adjust the door alignment as necessary for the holes to align. Insert another pin through on the other end.

Assembly is now complete. Enjoy!

# Parts Diagram

Note: Not to scale




Horizontal Trim (x4)




Pins (x2)



Knob



Door Frame Short (x4)



Door Frame Long (x2)




Corner Trim




Vertical Trim (x2)




Door Frame Long (knob) (x2)

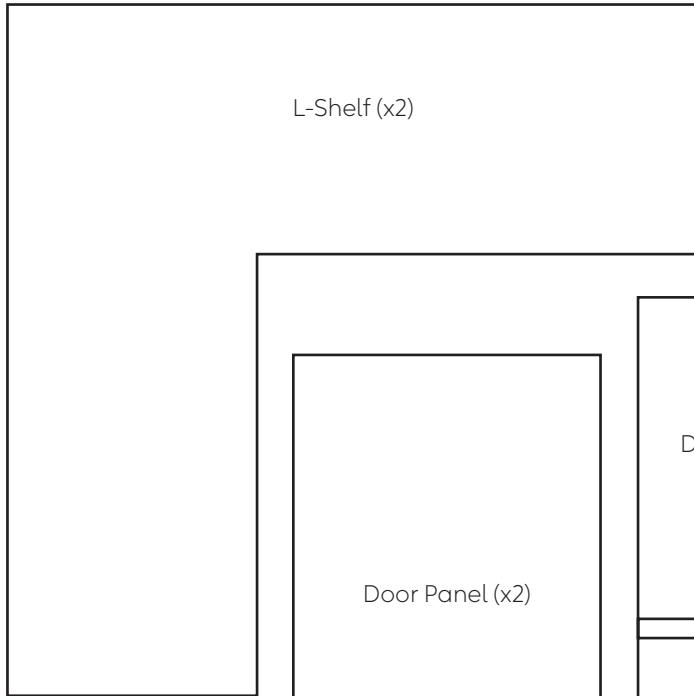


L-Shelf (x2)

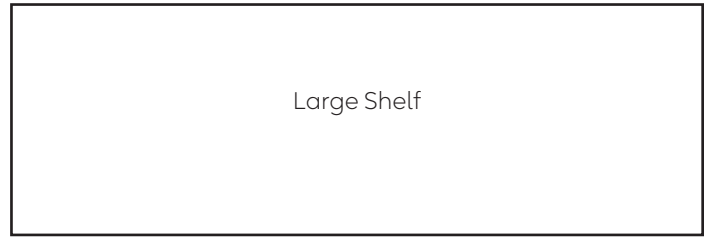


Large Shelf

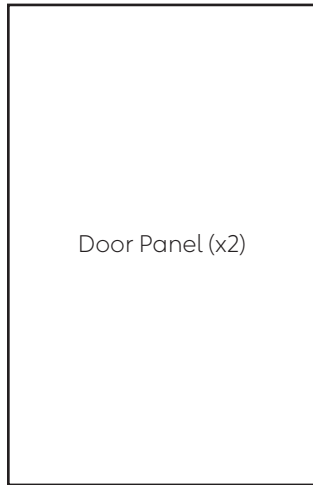


Door Panel (x2)

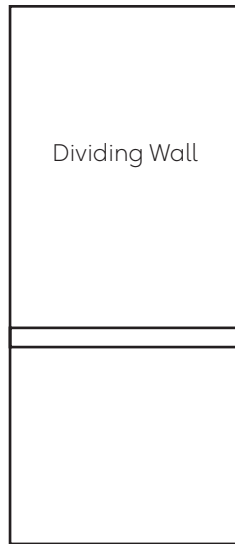


Dividing Wall

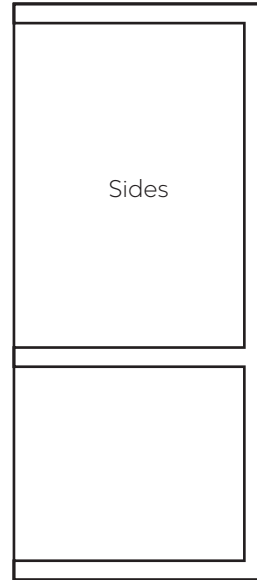


Sides

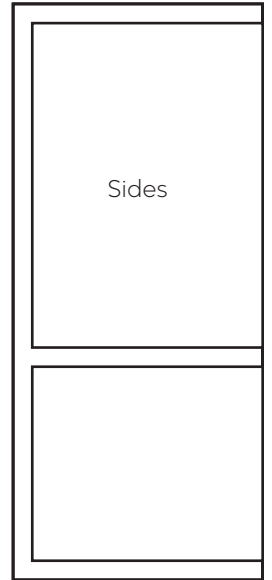

Sides

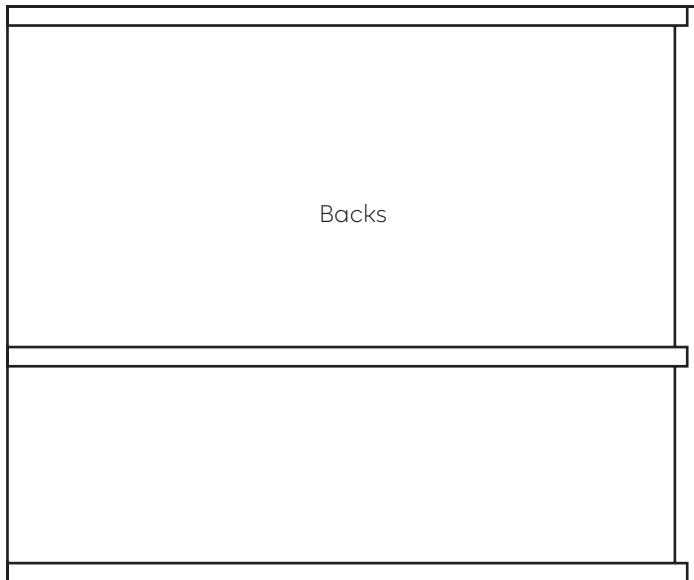

Backs

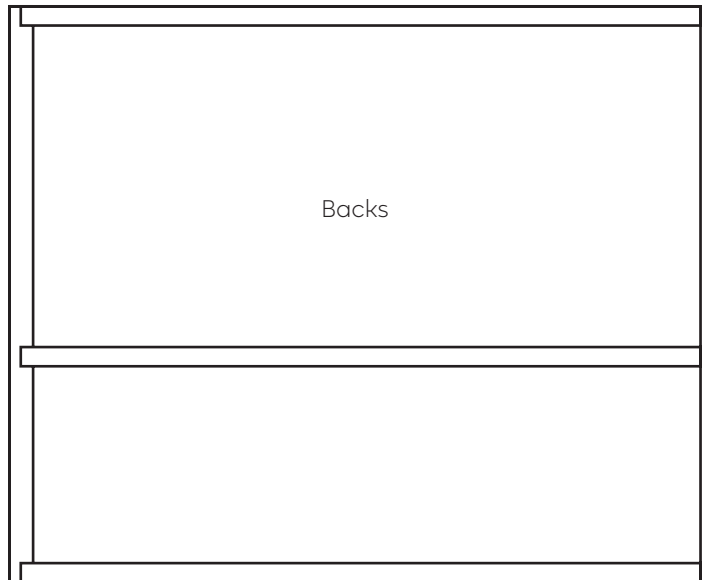

Backs