

#56202 Hanna Collection Double Vanity

Available exclusively at miniatures.com

Step-by-step assembly instructions

Copyright miniatures.com 2022

PARTS LIST:

Back Wall (BW)
 Side Walls (SW) x2
 Front Wall (FW)
 Front Trim (FT)
 Side Trim (ST) x2
 Countertop (C)
 Sink (S) x2

SUPPLIES NEEDED:

Glue (such as #1249 Weldbond)
 Dam clean cloth
 Hardware

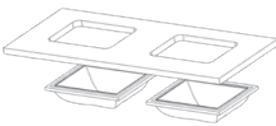
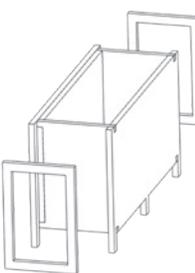


GENERAL INSTRUCTIONS

- Identify and inspect all parts using the Parts List and Parts Diagram.
- Read the directions completely before beginning the project.
- If possible, have a dedicated work area so that you are not unpacking, repacking, and moving the project from place to place.
- Choose a work surface that is level, clean, dry, and protected from glue spills.
- Do a dry fit, using masking tape to hold parts in place, to make sure everything fits together correctly before assembling permanently.

Assembly Instructions

Tip: Gently wipe off any residual soot from all cut edges using a little rubbing alcohol on a clean cloth.

1. Mount the Sinks (S) to the underside of the Countertop (C). Put this assembly aside. 
2. Place the Back Wall (BW) flat on your work surface.
3. Glue both Side Walls (SW) to the Back Wall (BW). They will be standing upright.
4. Glue the Front Wall (FW) to both Side Walls (SW). Let the glue set for a few minutes.
5. Glue the Front Trim (FT) onto the Front Wall (FW). Apply glue to the smooth side of the Front Trim (FT) not the etched side since the etched side is outward facing. Also, apply glue to the inside area of the Front Trim (FT) only since the left and right edges will be visible. Do not add glue to the Front Wall (FW) surface as parts of it will be visible. The Front Trim (FT) is flush at the top and centered on the sides.
6. Glue the Side Trim (ST) onto each Side Wall (SW). These fit between the Back Wall (BW) and the Front Trim (FT) and are flush at the top. 
7. Glue the Countertop (C), with the sink in place from Step 1, onto the vanity. It is flush at the back and centered on the sides. Note that the Countertop (C) can be oriented with the sink forward or with the sink towards the back.

Assembly of the Double Vanity is now complete.
 To finish, add wood filler to any gaps around the notches.
 Sand then paint.

Parts Layout

