

# #9046 Large Display Box Kit

by Houseworks Ltd.

Step-by-step assembly instructions

Copyright miniatures.com 2021, 2025



**PARTS LIST:**

- Base
- Side Wall (2)
- Back Wall
- Top
- Corner Moulding (4)
- Frame Trim
- Acrylic Pane

**SUPPLIES NEEDED:**

- Masking tape
- White glue (such as #1249 Weldbond)
- Damp clean cloth
- Exterior and interior finishes

**GENERAL INSTRUCTIONS**


- Identify and inspect all parts using the Parts List.
- Thoroughly read the directions before starting.
- Set up a dedicated work area to avoid the need to unpack, repack, or move the project frequently.
- Use a clean, level, and dry work surface protected from glue spills.
- Dry fit the parts using masking tape to ensure everything aligns correctly before permanent assembly.

## Assembly Instructions


**Tip:** Plan the finishes for the interior and exterior at the dry-fit stage, before final/permanent assembly. It is easier to finish the panels as flat surfaces. Disassemble and finish as desired, then reassemble using glue.

1. Use a fast setting glue or good thick "tacky" white glue that dries clear.


Apply glue along the bottom edge of the **Back Wall** and slide it into the channel in the back of the **Base**. Note: the narrow groove goes in front.

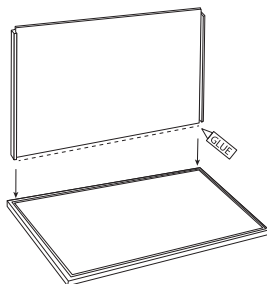


2. Apply glue inside the **Corner Moulding** on the **Back Wall** and along the bottom edge of a **Side Wall**; slide it into the channel in the side of the base. Repeat on the other side.

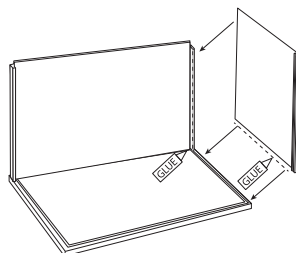


3. Apply glue inside the channels in the **Top** and fit onto the top of the box. Or, you may choose to leave the top unglued to allow access.

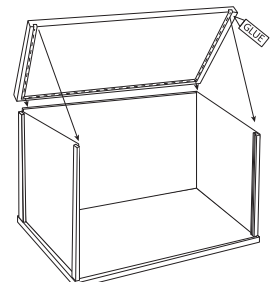

4. Remove the protective backing from the **Acrylic Pane**. Apply a thin line of glue along the bottom edge only and position the pane in the center of the channel at the back of the **Frame Trim**. Hold **Pane** upright until the glue sets.

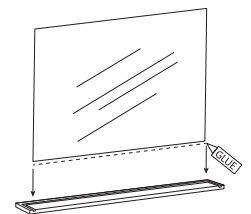

5. Slide the **Pane** into the grooves in the front mouldings. **DO NOT** glue. This panel allows access from the front.

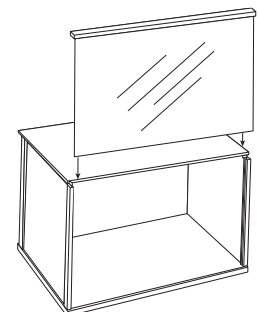

Assembly of the Large Display Box Kit is now complete.